



## Cara Mengaktifkan Share Printer di Windows

### Agar Aplikasi Library Escpos-PHP Connect Ke Printer Thermal POS

1. Sambungkan Printer menggunakan kabel USB > Install Driver
2. Nyalakan Printer ke Posisi On
3. Buka Control Panel Windows > Device and Printers

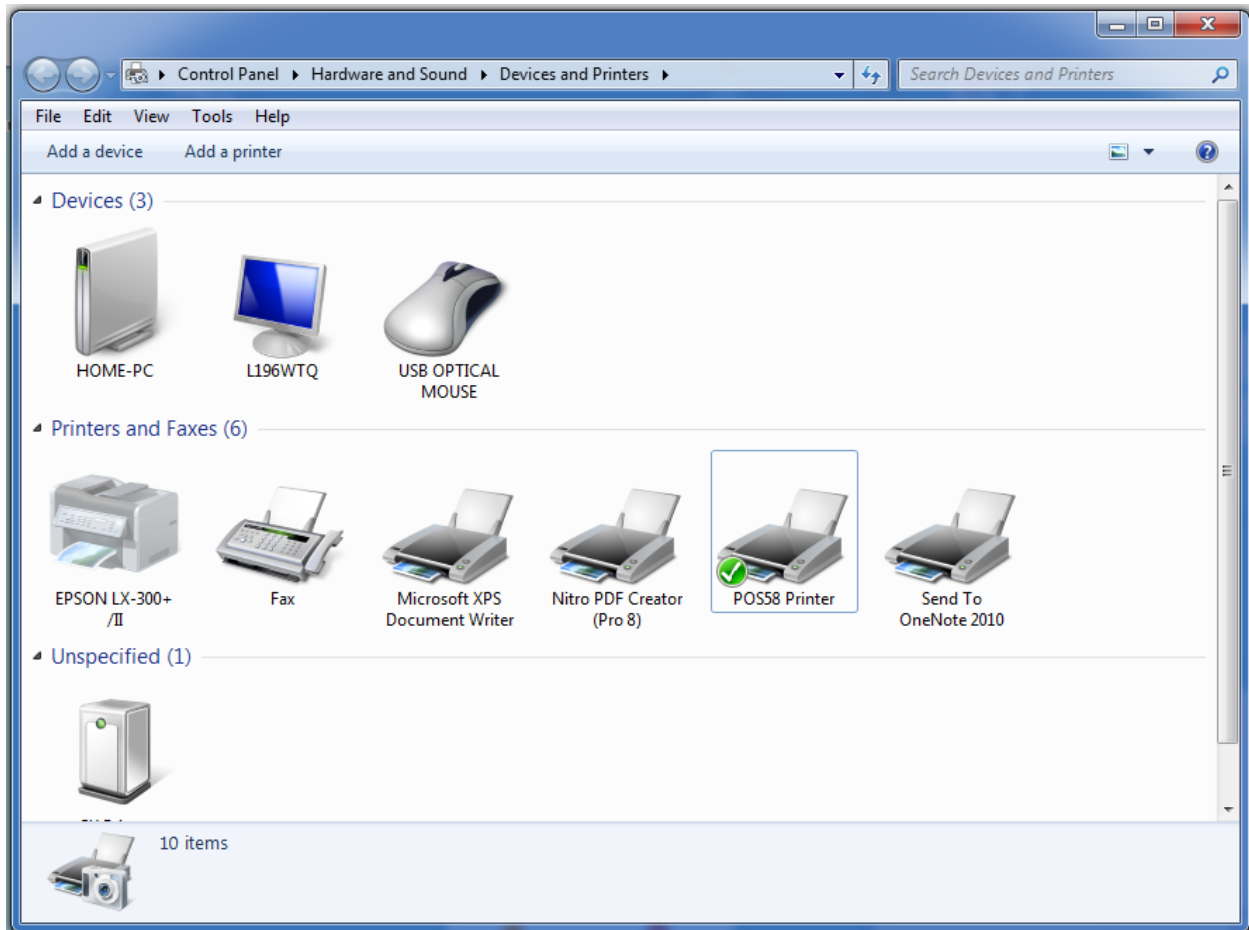

4. Klik Kanan pada Printer > Printer properties. Contoh: POS58 Printer

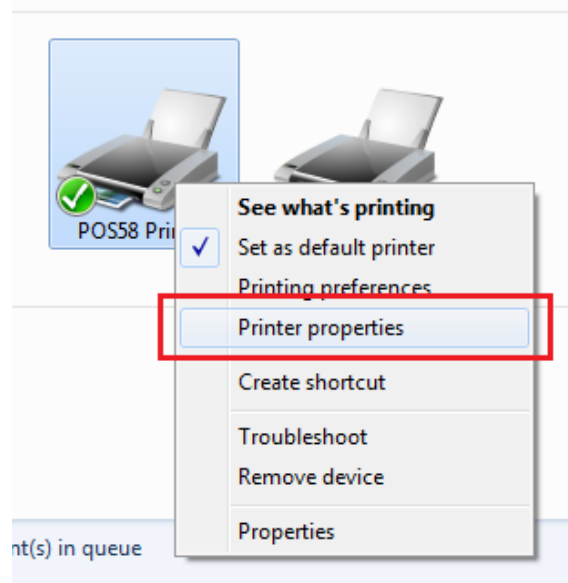

5. Tab Sharing > Share this printer > Share name: **Receipt Printer** > Klik OK

